



T24-HA



Amber Instruments Ltd

Tel: +44 (0)1246 260250 | E-mail: sales@amberinstruments.com  
Web: amberinstruments.com  
3 Mercury House, Calleva Park, Aldermaston, Berkshire, RG7 8PN.

## Wireless Handheld Display for Multiple Transmitters



### Introduction

The T24-HA handheld displays data from up to 12 wireless transmitter modules and forms part of the T24 modular telemetry system.

The data sent by transmitter modules can be utilised by multiple receivers such as displays, handheld readers, analogue outputs, relay modules and computer interfaces. Receivers support common industrial power supplies and are available in robust IP rated enclosures with internal antennas optimised to give outstanding coverage.


The T24-HA provides either a summed total from all selected transmitters and the ability to view individual transmitters. Two AA batteries power the handheld which has been designed for low power operation.

The T24 Toolkit software offers a fast and simple way to configure the display format, unit conversion, zero adjustment and transmitter selection. A function key can send the displayed value to other receivers such as a printer.

### Product Features

- Connect to up to 12 transmitters
- Tare function
- Provides summation of up to 12 transmitters
- Sleep/ wake acquisition modules
- Auto shut down
- Rugged construction

### T24 System Overview

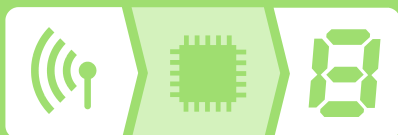

T24 Wireless Telemetry Sensor System is a modular wireless solution for industrial sensor applications.

High accuracy, high quality measurement is interfaced with simple yet powerful configuration and monitoring software.

## Specifications

### Power Supply

**Power supply voltage** 2.5 to 3.6 Vdc

**2 off AA 1.5V primary cells**

### Battery Life

Based on 2 Ah capacity batteries

**Continuous operation** 35 hours

**Standby mode (powered off)** 1.5 years

### Radio

**Radio type** Licence exempt transceiver

**Radio frequency** 2.4 GHz

**Transmit power** 10 mW

**Range** Up to 800 m

### Environmental


**Operating temperature range** -10 to 50 °C

**Storage temperature range (no batteries)** -40 to 85 °C

**Maximum humidity** 95% non-condensing

**IP rating (ACM and ACMi)** IP67/Nema4

## Mechanical

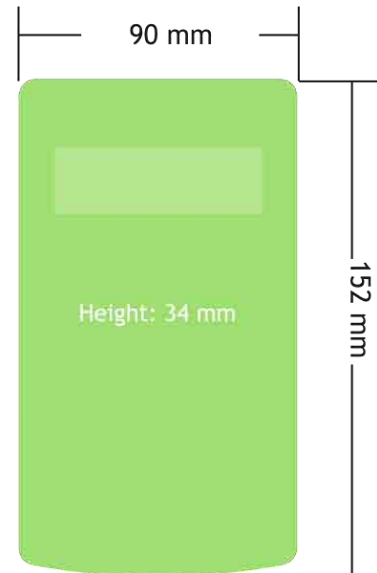

## Electrical



## Order Codes

### T24-HA

Wireless handheld display for multiple transmitters

### TR100-CA

Black leather case with clear viewing window with shoulder strap